

# Pin-Out

## AVR-Programmieradapter (Sicht von oben)

1: MISO

2: VCC

3: SCK

4: MOSI

5: NRESET

6: GND

